


# ARENA NORDICO

## Operations Manual

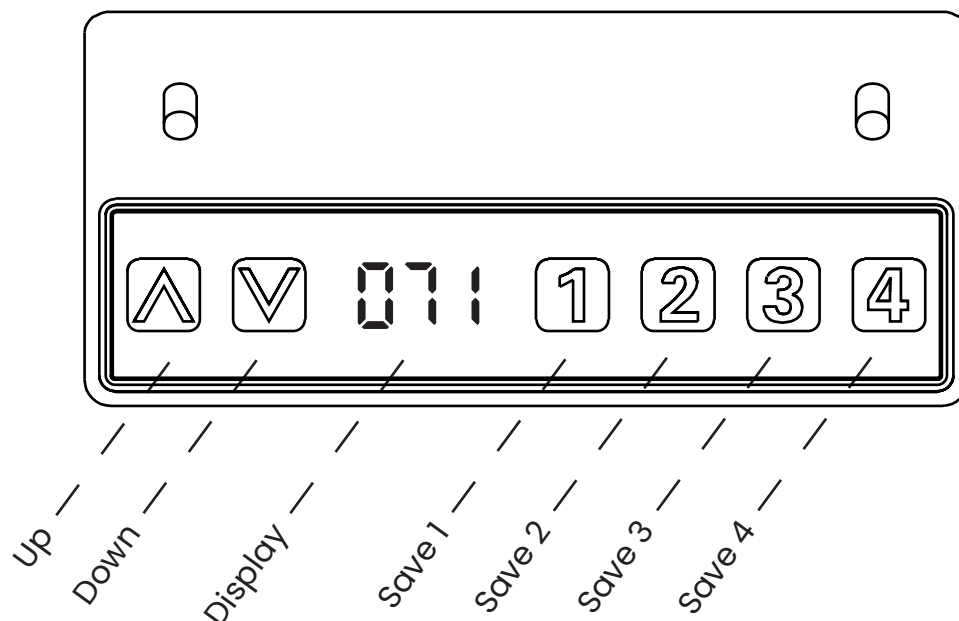

### Up/Down operation

- Press the Up button until you reach your desired height. The operation stops when reaching the highest possible point.
- Press the Down button until you reach your desired height. The operation stops when reaching the lowest possible point.

### Position memory

- You can save up to four positions corresponding to the save buttons (1, 2, 3, 4). Save the current position by long pressing your preferred save button.
- Short press any of the save buttons (1, 2, 3, 4) and the desk will move to the saved position.

### Setting a minimum height

- To set the current height as minimum height for the desk, hold down both 1 + Down buttons until the display shows "-d" indicating that the minimum height has been stored. Storing a minimum height ensures that the desk never goes below this position.
- To delete the saved minimum height, let the desk run downwards until it stops. Press the down button once more. The display shows "-L". Then hold down the 1 + Down buttons until the display shows "-d" indicating that the stored minimum height has been deleted.

### Setting a maximum height

- To set the current height as maximum height for the desk, hold down both 1 + Up buttons until the display shows "-u" indicating that the maximum height has been stored. Storing a maximum height ensures that the desk never goes above this position.
- To delete the saved maximum height, let the desk run upwards until it stops. Press the Up button once more. The display shows "-h". Then hold down the 1 + Up buttons until the display shows "-u" indicating that the stored maximum height has been deleted.

## 0 position reset

- Hold down both Up + Down buttons at the same time until the display shows " - - - ". The desk will run downwards to recognize the 0 height. It will then move up to its fixed position. After it has stopped, the reset is complete. This also resets maximum height and minimum height.

## Lock and unlock

- Lock/unlock the controller unit by holding down the Up + Down + 2 buttons until the display shows " L " for locked, or returns from " L " to regular numbers for unlocked.

## Error codes

Code	Description	Clear method
E-2	Motor overcurrent	Press up / down button -> Reduce load -> Replace motor *
E-3	Motor hall fault	Press up / down button -> Check cable -> Replace motor *
E-4	Current overload	Press up / down button -> Check cable -> Replace motor *
E-5	Motor power device failure	Unplug the desk. Plug it in again -> Replace motor / power supply *
E-6	Abnormal motor current	Unplug the desk. Plug it in again -> Replace motor *
E-7	Main power device failure	Unplug the desk. Plug it in again -> Replace power supply *
E-9	Motor stalled	Press up / down button -> Check cable -> Reduce load -> Replace motor *
E 10	Trigger anti pinch	Unplug the desk. Plug it in again -> Press up / down button
H0E	Over temperature protection	Wait for temperature to drop. Do not run the desk for over 2 minutes at a time. Wait 18 minutes.
F5E	Power failure	Reduce load -> Check power cable (may be loose)

\* Contact Arozzi support.

EU: [arozzi.se/support](mailto:arozzi.se/support) --- US: [arozzi.com/support](mailto:arozzi.com/support)